
QUICK REFERENCE GUIDE

APEX™ Drive-Thru Headset

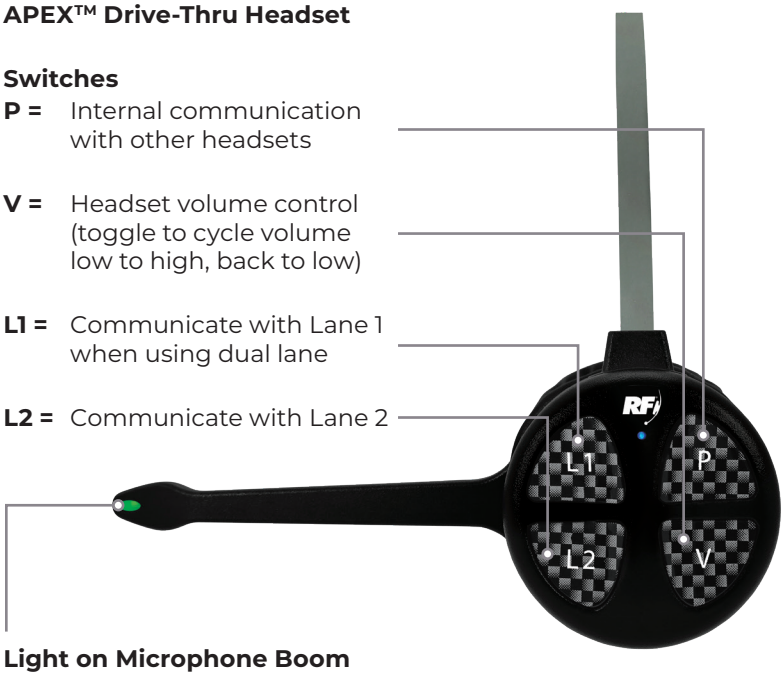

Switches

P = Internal communication with other headsets

V = Headset volume control (toggle to cycle volume low to high, back to low)

L1 = Communicate with Lane 1 when using dual lane

L2 = Communicate with Lane 2

Light on Microphone Boom

Solid green light = Standby mode no car present in Lane 1
Blinking green light = Communicating with customer or internally
Solid yellow light = Standby mode no car present in Lane 2
Blinking yellow light = Communicating with Lane 2
Blinking red light = Headset not registered
Blinking yellow/green = Headset in registration mode

Replacing the Battery



- Press the red battery latch down (towards the ear pad) and the battery will eject
- Headset will turn off automatically after 10 minutes of no movement
- Pull battery using pull tab only

6-Port Battery Charger

LED Indicator



- See the status of the battery charge or if the battery is faulty

Green light =
Battery is charged


Yellow light =
Battery is charging

Flashing yellow light =
Faulty battery

Follow these two steps to access the help menu to do any of the following tasks:


- **Register Headsets** (up to 32 headsets)
- **Program Alerts** (5 options)
- **Program Reminders** (30 options)
- **Program Greeters** (15 options)
- **Set Volumes**
- **Select a Lane Type**
- **Other Help Options**

1

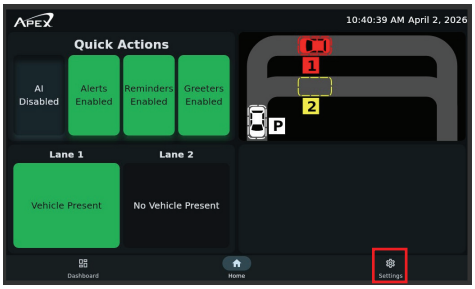

Press the Gear icon on the bottom right hand side of the screen

2

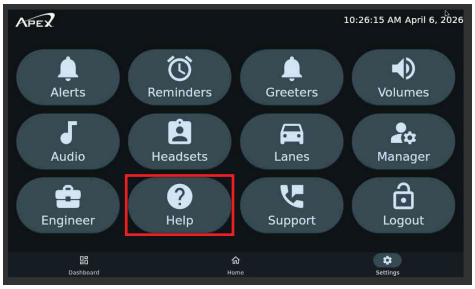

Then you can access the Help icon

RFI DRIVE-THRU
Restaurant Technology Solutions
EST. 1989